

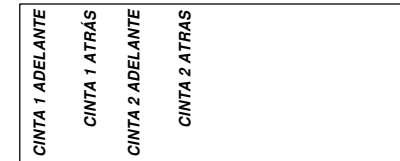


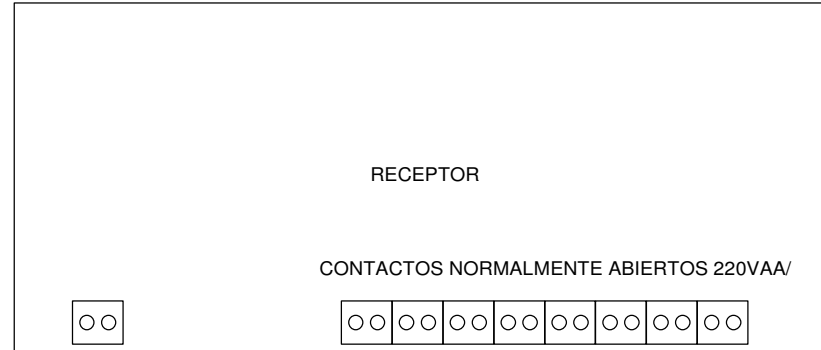


BOTON PARO MARCHA CINTA HACIA ADELANTE

BOTON SELECCION DE CINTA


BOTON PARO MARCHA CINTA HACIA ATRÁS

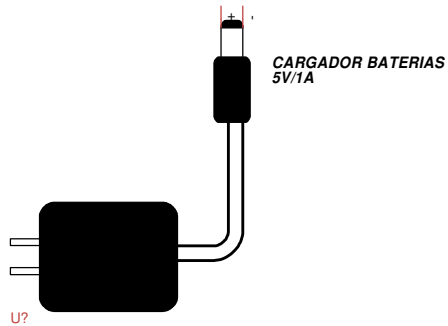


RECEPTOR CINTAS 1 Y 2

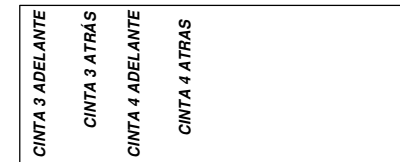

RECEPTOR CINTAS 3 Y 4

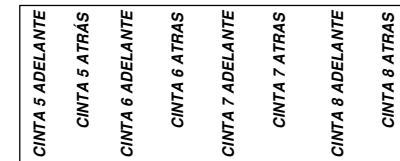

RECEPTOR CINTAS 5,6,7,8

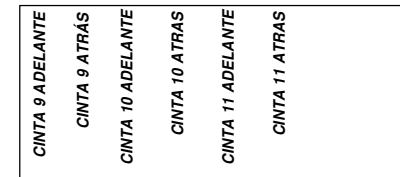

RECEPTOR CINTAS 9,10,11

Title REF58148 CONTROLADOR DE CINTAS		
Author JOSE LOZOYA PARDO DELOZOYA ELECTRONICA S.L.		
File LOZOYA\PRODUCT~1\RE4057~1\REF581~1.DSN	Document 1	
Revision 1.0	Date 30-07-2017	Sheets 1 of 1